

Notice

The information contained in this document is provided as is and is subject to change without notice.

HEWLETT-PACKARD MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THIS MATERIAL, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Hewlett-Packard shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

This document contains proprietary information which is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated without the prior consent of Hewlett-Packard Company.

Company names and product names mentioned herein may be trademarks and/or registered trademarks of their respective companies.

Comments concerning this specification can be sent to the editor via e-mail. The e-mail address is villone@sdd.hp.com. If you find parts of this specification to be contradictory, unclear, or incorrect, please notify the editor. Ideas on how to improve the specification are encouraged.

The PCL Implementor's Guide

Version 6.0 (4/01/95)

Hewlett-Packard CONFIDENTIAL

THIS DOCUMENT CONTAINS CONFIDENTIAL PROPRIETARY INFORMATION THAT IS
HEWLETT-PACKARD (HP) PROPERTY. DO NOT DISCLOSE TO OR DUPLICATE FOR
OTHERS EXCEPT AS AUTHORIZED BY HP.

Copyright Hewlett-Packard Company 1991, 1992, 1993, 1994, 1995

Table of Contents

Chapter 1: PCL Goals and Guidelines

Introduction.....	1-1
The PCL Committee.....	1-2
The PCL Implementor's Guide.....	1-3
The Proposal Process.....	1-3
Language Objectives	1-5
Historical Perspective.....	1-6
Language Design Guidelines	1-7
References.....	1-9

Chapter 2: Job Setup

Introduction.....	2-1
Defaults.....	2-2
Setup without a Job Control Language.....	2-4
Printer Job Language (PJL)	2-5
Job Setup for PJL Printers	2-7
Peripheral Management Language (PML).....	2-8

Chapter 3: The PCL Page

Introduction.....	3-1
Margins.....	3-4
Orientation	3-7
The Current Active Position (CAP).....	3-8
Units of Movement.....	3-9
Resolution.....	3-10

Chapter 4: Escape Command Syntax

Introduction to PCL Commands.....	4-1
Two-Character Sequences	4-2
Parameterized Sequences.....	4-2
Rules for PCL Commands	4-7
Combining Commands	4-8
Backus-Naur Form (BNF)	4-9
Converting a Floating Point Number.....	4-10

Chapter 5: Text Processing

Introduction.....	5-2
Control Codes and Special Codes	5-4
Symbol Sets	5-8
Printing Hidden Characters.....	5-11
Text Enhancements	5-12
Escapement Encapsulated Text.....	5-14
Text Parsing Method	5-17

Chapter 6: Printer Control

PCL Job Control.....	6-2
Printer Diagnostics	6-12
Device Specific Control.....	6-13
Internal HP Sequences.....	6-16

Chapter 7: Page Control

Introduction.....	7-2
Media Size	7-2
Media Source	7-8
Orientation	7-9
CMI and LMI (formerly HMI and VMI).....	7-14
Text Path.....	7-16
Margins and Text Area.....	7-18

Chapter 8: CAP Movement

Introduction.....	8-1
Horizontal Positioning Commands.....	8-7
Vertical Positioning Commands.....	8-9
Saving CAP.....	8-11

Chapter 9: Font Selection

Introduction to Fonts	9-2
Primary and Secondary Fonts	9-7
Selection by Attribute.....	9-8
Font Selection by ID.....	9-43

Chapter 10: Downloading Fonts

Introduction to Soft Fonts.....	10-1
The Font ID.....	10-3
The Font Definition.....	10-4
Managing Fonts.....	10-38

Chapter 11: Downloading Characters

Introduction.....	11-1
The Character Code.....	11-3
The Character Definition	11-4

Chapter 12: Unbound Fonts & Downloaded Symbol Sets

Introduction.....	12-1
Unbound Font Operations.....	12-2
Downloading Symbol Sets.....	12-5
Managing User-Defined Symbol Sets	12-11

Chapter 13: Raster Graphics

Introduction.....	13-1
Raster Mode.....	13-4
Raster Data Transfer.....	13-10
Raster Compression.....	13-12
Raster Scaling	13-22

Chapter 14: Color

Introduction.....	14-2
-------------------	------

Simple Color Mode	14-13
PCL Imaging Mode	14-15
Palette Operations.....	14-28
Foreground Color	14-41
Halftone Algorithms.....	14-42
User-Defined Dithers.....	14-44
Color Lookup Tables.....	14-47
Gamma Correction	14-49
Viewing Illuminant.....	14-50
Page Media Color Commands	14-51

Chapter 15: Configure Raster Data

Introduction.....	15-1
-------------------	------

Chapter 16: The Color Print Model

Introduction	16-2
Logical Operations.....	16-4
The Default Print Model	16-9
Transparency Modes.....	16-10
Pixel Placement	16-14
Patterns.....	16-15
User-Defined Patterns	16-18
Rectangular Area Fills (Rules).....	16-22
Arbitrary Masking	16-25

Chapter 17: Vector Graphics

Introduction	17-1
Entering HP-GL/2.....	17-2
Exiting HP-GL/2	17-5
Resetting to Defaults.....	17-6
Picture Presentation Commands.....	17-9
HP-GL/2 Modifications in the PCL Context.....	17-16

Chapter 18: Macros

Introduction.....	18-1
Creating Macros	18-2
Invoking Macros	18-2
Managing Macros.....	18-3
The Modified Print Environment	18-3
The Overlay Print Environment	18-5
Rules Governing Macros	18-6
Macro Commands	18-7

Chapter 19: Status Readback

Introduction.....	19-1
Entity Status Commands.....	19-4
Memory Status Commands.....	19-10
Response Synchronization.....	19-12

Chapter 20: Obsolete Codes

Procedure for Obsoleting Functionality.....	20-2
Movement Segment.....	20-3
Rendering Segment	20-8
Font Segment	20-22
Page Presentation Segment.....	20-26
Device Control and Diagnostics Segment	20-26

Appendix A: Unimplemented Commands

Alphanumeric IDs (<i>Esc&n#W</i>).....	A-2
Alphanumeric IDs for Media Types	A-4
Cluster Printing (<i>Esc&c#W</i>).....	A-6
Media Source for Multi-Tray Input Devices (<i>Esc&l#H</i>)	A-7
Media Destination (<i>Esc&l#G</i>).....	A-9

Appendix B: Product Support Matrix

Glossary

Indexes